



Instrument Return Form

Instrument ID	Recalibration Interval		
	12Months	6 Months	3 Months
	12Months	6 Months	3 Months
	12Months	6 Months	3 Months
	12Months	6 Months	3 Months
	12Months	6 Months	3 Months

Return Address

Company Name			
Name			
Address Line 1			
Address Line 2			
City, State, Zip			
Residential Address	Yes	No	Expedited Handling
			Yes No
Telephone No. (For FedEx Use)			
email			
Additional Instructions			

Instruments with internal or metal Geiger – Mueller tubes can be shipped by air or ground. For other types and for instruments with attached radioactive sources see next page. Call for additional assistance if needed.

Ship Instruments to:

RAM Services Inc.
 Attn: Calibrations
 510 County Highway V
 Two Rivers, WI 54241
 1-920-686-3889

Instruments with thin end-windows, as shown below, should be shipped by GROUND.



If shipped by **AIR**, these Geiger tubes should be packaged inside an airtight container, such as a paint can, to ensure that the window does not rupture at reduced pressures aloft.

Instruments with Attached Radioactive Check Sources.



1. The easy way.

Remove the 4 screws and store screws and the check source in a safe place. Replace the check source when the instrument is returned. If you do not replace the check source, remove the holder entirely.


2. The hard way.¹

- A. Do not ship via USPS or UPS
- B. Print the UN2910 label to the right on a color printer or use a pre-printed label.
- C. Apply the label to the outside of the package. The label shown is the right size.
- D. In the REFERENCE box on the Air Waybill, enter the Proper Shipping Name EXACTLY as shown:

UN2910
RADIOACTIVE MATERIAL – EXCEPTED PACKAGE
LIMITED QUANTITY OF MATERIAL

E. Pray that FedEx doesn't bounce the package anyway.

F. If the package is to be returned to your home someone must be there to receive it.

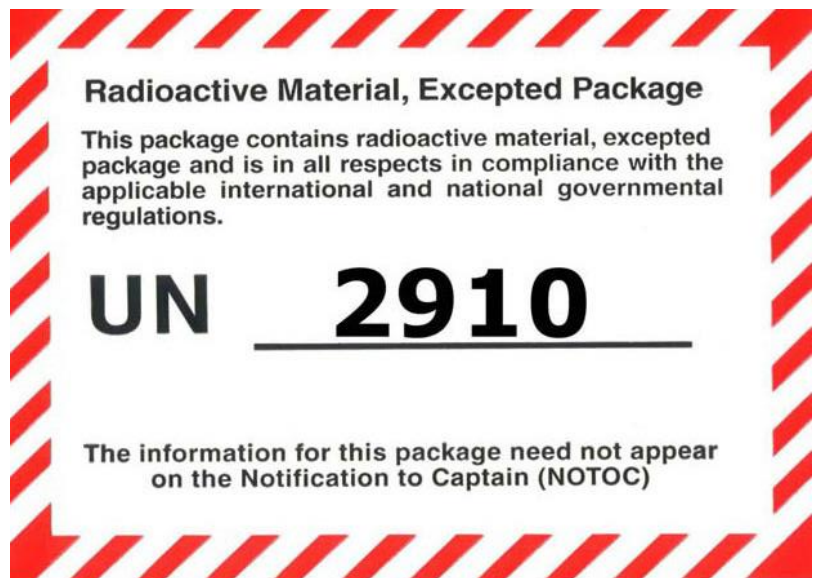

¹ RAM Services provides this guidance to help clients avoid regulatory conflicts and not to satisfy U.S. DOT training requirements.